



Instruction manual



Pizza oven counter top 1 chamber digitální ovládání FPP 36

TABLE OF CONTENTS

1. DECLARATION OF CONFORMITY	3
2. TECHNICAL DATA	3
3. LOCATION ELECTRIC	3
4. SAFETY MEASURES FOR FIRE PROTECTION	3
5. INSTALLATION	4
6. CONNECTING THE ELECTRICAL CABLE TO THE NETWORK	4
7. CLEANING AND MAINTENANCE	7

1. DECLARATION OF CONFORMITY

Decree of the Ministry of Health of the Czech Republic no. 38/2001 Coll. of 19 January 2001 Regulation (EC) No 1907/2006 - Registration, Evaluation, Authorisation and Restriction of Chemicals (REACH) Regulation of the European Parliament and Council Regulation (EC) no. 1935/2004 of 27 October 2004

The products meet the requirements of §26 of Act No.258/2000 as amended. The products meet the requirements of RoHS Directive 2015/863/EU, 10/2011, 517/2014, 2015/1094, 2015/1095.

Attention, the manufacturer gives up any responsibility in case of direct and indirect damage that is related to poor installation, incorrect intervention or adjustments, insufficient maintenance, incorrect use and which are eventually caused by other causes than the points referred to in the conditions of sale. This appliance is intended only for professional use and must be operated by qualified persons. Parts that have been secured by the manufacturer or authorized worker after the setting rebuild.

2. TECHNICAL DATA

The label with technical data is located on the side or back panel of the device. Please read the wiring diagram and all the following information in the attached manual before installation.

Net Width [mm]	Net Depth [mm]	Net Height [mm]	Net Weight [kg]	Power electric [kW]	Loading
505	214	214	15.00	1.750	230 V / 1N - 50 Hz

3. LOCATION ELECTRIC

For the correct operation and placement of the appliance, it is necessary to observe the following all prescribed standards for the given market. Unpack the device and check that the device has not been damaged during transport. Place the device on a horizontal surface (maximum unevenness up to 2°). Small unevenness can be leveled with adjustable feet. If the device will be placed in such a way that it will be in contact with the walls of the furniture, these must withstand a temperature of up to 60°C. Installation, adjustment, commissioning must be performed by a qualified person who is authorized to perform such operations, according to applicable standards. The device can be installed separately or in series with devices of our production. A minimum distance of 10 cm from flammable materials must be observed. In this case, it is necessary to secure the appropriate modifications to ensure the thermal insulation of the combustible parts. The appliance must only be installed on a non-flammable surface or against a non-flammable wall. **Parts of the appliance provided by the manufacturer. or his representative, the worker performing the installation may not rebuild the product.**

4. SAFETY MEASURES FOR FIRE PROTECTION

- the appliance may only be operated by adults
- the appliance may be used safely in accordance with applicable market standards:

Fire protection in spaces with special risk or danger

Protection against the effects of heat

- the appliance must be placed so that it stands or hangs firmly on a non-combustible surface

Objects of flammable substances must not be placed on the appliance at a distance less than a safe distance from it (the smallest distance between the appliance and flammable substances is 10 cm).

Table: degree of flammability of building materials included in st. flammability of substances and products

Degree of flammability	Building materials
A - non-flammable	granite, sandstone, concrete, brick, ceramic tiles, plaster
B - Not easily flammable	Acumin, Heraclitus, Lihnos, Itaver
C1 - highly flammable	wood, hardwood, plywood, hard paper, umakart
C2 - moderately flammable	chipboards, solodur, cork boards, rubber, flooring
C3 - Highly flammable	wood fiber boards, polystyrene, polyurethane, PVC

- information on the degree of flammability of common building materials is given in the table above. Appliances must be installed in a safe manner. During installation, the relevant design, safety and hygiene regulations must also be respected:
- fire safety of local appliances and heat sources
- fire protection in areas with special risk or danger
- protection against the effects of heat

5. INSTALLATION

Important: The manufacturer does not provide any warranty for defects arising as a result of incorrect use, failure to follow the instructions contained in the attached user manual and mishandling of appliances. Installation, modification and repair of appliances for large kitchens, as well as their dismantling due to possible damage to the gas supply, can only be carried out on the basis of a maintenance contract, this contract can be concluded with an authorized dealer, while technical regulations and standards and regulations must be observed regarding installation, electrical supply, gas connection and work safety. Technical instructions for installation and adjustment, for use by specialized technicians ONLY. The instructions that follow refer to a technician qualified for installation to carry out all operations in the most correct manner and according to the applicable standards. Any activity related to regulation etc. must only be performed with the device disconnected from the network. If it is necessary to keep the appliance under voltage, the utmost care must be taken. The type of appliance for extraction is declared on the nameplate, it is an A1 appliance.

6. CONNECTING THE ELECTRICAL CABLE TO THE NETWORK

Installation of the electrical supply - this supply must be separately secured. Ato with the corresponding circuit breaker of rated current depending on the power input of the installed device. Check the power consumption of the device on the production label on the back panel (or side) of the device. The connected ground wire must be longer than the other wires. Connect the device directly to the network, it is necessary to insert a switch between the device and the device with a minimum distance of 3 mm between the individual contacts, which corresponds to the applicable standards and load. The earth supply (yellow-green) must not be interrupted by this switch. Connect the device to the mains if the socket has adequate protection. In any case, the supply cable must be located so that it does not reach a temperature of 50 degrees higher than the environment at any point. Before the appliance is connected to the network, it is necessary to first make sure that:

- the supply circuit breaker and the internal distribution can withstand the current load of the appliance (see matrix label)
- the distribution board is equipped with effective grounding according to the standards of the relevant market and the conditions given by law
- the socket or switch in the supply is easily accessible from the appliance
- the electrical supply to the device must be made of oil-resistant material

We disclaim any responsibility in the event that these standards are not respected and in the event of a violation of the above principles. Before first use, you must clean the device, see chapter "cleaning and maintenance". The appliance must be grounded using a screw with a grounding mark.

- Do not insert the plug of the power supply into the electrical outlet. sockets and do not pull out the zel. sockets with wet hands and pulling on the power cord!
- Do not use extension cords or multiple sockets.
- **The mains connection point must have a maximum of the following impedance: $Z_{MAX} = 0.042 + j 0.026 \Omega$ for the phase conductors and $0.028 + j 0.017 \Omega$ for the neutral conductor.**

INSTRUCTIONS FOR USE

Before first use


Before using the appliance, remove the protective foil from all surfaces and wash the appliance with water and washing-up liquid, then wipe it with a damp cloth. Before you start baking, let the oven run empty for

about 30 minutes at maximum power to burn off any residues of preservatives.

Description of the appliance

The FPP 36 is a baking oven with three pre-set programs and one warm-up / temperature-hold program. It is controlled by an electronic thermostat, operated from the control panel on the front of the oven.

Control panel

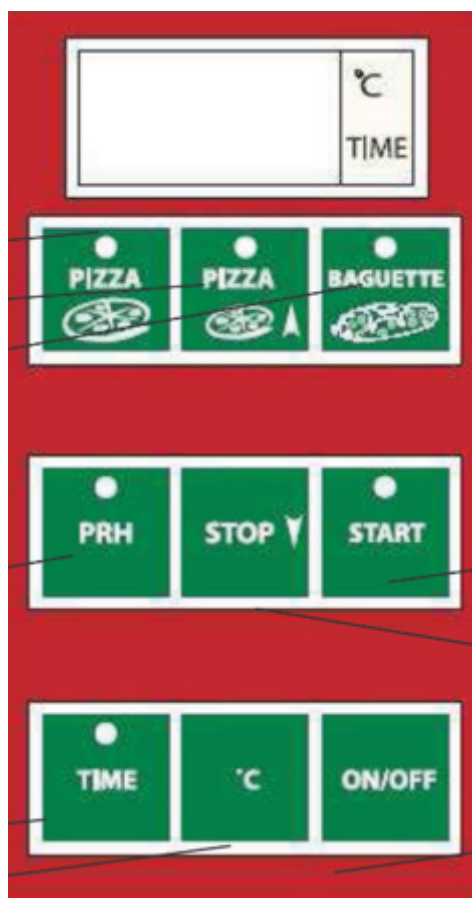

PIZZA (large)	Program for baking a large pizza.
PIZZA (small)	Program for baking a small pizza.
Baguette	Program for baking a baguette.
PRH	Short press = heats up the oven. Long press = temperature hold (temperization).
Stop	Stops / cancels the running program; in the menu = moves to the previous item / decreases a value.
Start	Starts and confirms a program / saves a value in the menu.
Time	Manual time setting (4th program); shows the remaining time.
°C	Displays and sets the chamber temperature.
ON/OFF	Switches the oven on and off.

Switching on and basic operation

- Switch the oven on with the “ON/OFF” button.
- After switching on, the appliance goes into standby - the display shows the current chamber temperature (the “°C” symbol lights up to the right of the display).
- Select the required program by pressing large “PIZZA”, small “PIZZA” or “BAGUETTE”.

Once a program starts, the oven begins heating and the indicator light of the selected program flashes red. The display shows the remaining program time instead of the temperature (the “TIME” symbol lights up); if the time is longer than 9 minutes 59 seconds, only tens of seconds are shown. Approximately once every 12 seconds, the current chamber temperature is shown for 2 seconds.

When the set temperature is reached, the green indicator lights up (if the chamber temperature is lower, the indicator flashes green). When the set time elapses, the program ends - this is signalled by three beeps and the program indicator alternating between red and green. Turn off the signal by pressing “STOP”.

Baking can be stopped at any time by pressing “STOP” - the oven returns to standby and the display again shows the chamber temperature.

Fourth program - manual setting (TIME)

Activate the fourth, manually adjustable program by pressing “TIME”. The display shows the preset time value, which can be adjusted with the arrows (small “PIZZA” = increase, “STOP” = decrease). Confirm with “START”, or with “°C” to show the preset temperature - adjust it the same way and confirm with “START”. Press “START” again to start the program.

The starting values are either the last used values or the factory preset values, depending on whether the “TIME” indicator lights green or red. You can switch between the two modes by pressing “TIME” and “°C” at the same time - the indicator then lights orange.

Heating and temperature hold (PRH)

- Short press of “PRH” - starts heating the oven to the last set temperature. Indicated by a flashing red light. Three beeps sound once the temperature is reached. Stop with “STOP”.

- Long press of “PRH” - starts the temperature-hold program (temperization); the indicator alternates between red and green. Unlike the heating program, the oven does not return to standby once the temperature is reached, but keeps the set temperature until you stop it with “STOP”.

Adjusting temperature and time during operation

Temperature and time values can also be changed while baking: press “TIME” or “°C” depending on which value you want to change, adjust the new value with the arrows and confirm with “START”. If the change is not confirmed, the appliance reverts to the previous value after a short time; the same happens if you press large “PIZZA”, small “PIZZA”, “BAGUETTE”, “PRH” or “ON/OFF”.

User menu (program settings)

Enter the menu by pressing “STOP” and “START” at the same time. The appliance will ask for a password (factory set to “0”). If the password is “0”, the first menu item “L.1” is shown automatically.

Navigating the menu: the up arrow (small “PIZZA” button) moves to the next item, the down arrow (“STOP” button) moves to the previous item. Press “START” to enter editing of the selected item - the up arrow increases the value, the down arrow decreases it; the large “PIZZA” button moves to the next digit (at the highest digit, a flashing decimal point is activated, which can also be moved with the arrows; pressing large “PIZZA” again returns to the lowest digit). Save the changed value with “START”; to exit without saving, press “PRH”.

Exit the menu with “PRH”. You can jump quickly to the end of the menu by repeatedly pressing the arrows.

L.1	Temperature of program 1 (large PIZZA)
t.1	Time of program 1 (large PIZZA)
L.2	Temperature of program 2 (small PIZZA)
t.2	Time of program 2 (small PIZZA)
L.3	Temperature of program 3 (BAGUETTE)

L.1	Temperature of program 1 (large PIZZA)
t.3	Time of program 3 (BAGUETTE)
L.4	Temperature of program 4 (TIME - manual)
t.4	Time of program 4 (TIME - manual)
r.p.	Repeat interval of the end-of-program signal for programs 1-4
L.t	Temperature of the warm-up program (PRH)
r.t	Repeat interval of the end-of-warm-up signal
n.PA	Menu password setting

7. CLEANING AND MAINTENANCE

It is recommended to have the device checked with a specialist service at least once a year. All the interventions in the device can only be carried out by a qualified person who has the authorization to do so.

CAUTION! The device must not be cleaned with direct or pressure water. Clean the equipment daily. Daily maintenance extends the life and efficiency of the equipment. Always turn off the main inlet to the device. Wash the stainless steel parts with a damp cloth with a detergent without coarse particles and wipe dry. Do not use abrasive or corrosive cleaning agents. Attention! Before using the device, it is necessary to remove the protective foil from the entire surface, and then wash it well with water with detergent, and then wipe it with a damp cloth. **ALERT!** The warranty does not apply to all consumables subject to normal wear (rubber seals, bulbs, glass and plastic parts, etc.). The warranty also does not apply to the device if the installation is not carried out in accordance with the instructions - an authorized worker according to the corresponding standards and if the equipment was unprofessionally manipulated (interventions in the internal equipment, etc.) or were operated by unhappy staff and contrary to the instructions for use, further The warranty does not apply to damage by natural effects or other external intervention. **Required service organization 2 times a year. After the lifetime, the shipping packaging and equipment are submitted to the collection, according to the regulations on waste management and hazardous waste.**